



# Digital Ignition



## Kawasaki KLF400

Unit number 21119-1448 / CI672


**Manual, conversion to Carmo TCI unit**

- Remove the old TCI unit

- The two old connectors (two pins + three pins) must be replaced by the connector supplied with the Carmo unit.


- Remove the old connectors by cutting the wires. Make sure you cut the wires close to the old connectors, so that they stay as long as possible.

- You must now attach the new connector. Start with sliding a green rubber ring on the wire, then strip the end of the wire and attach a faston to it. The connector is numbered. Use the diagram below for the correct connections.

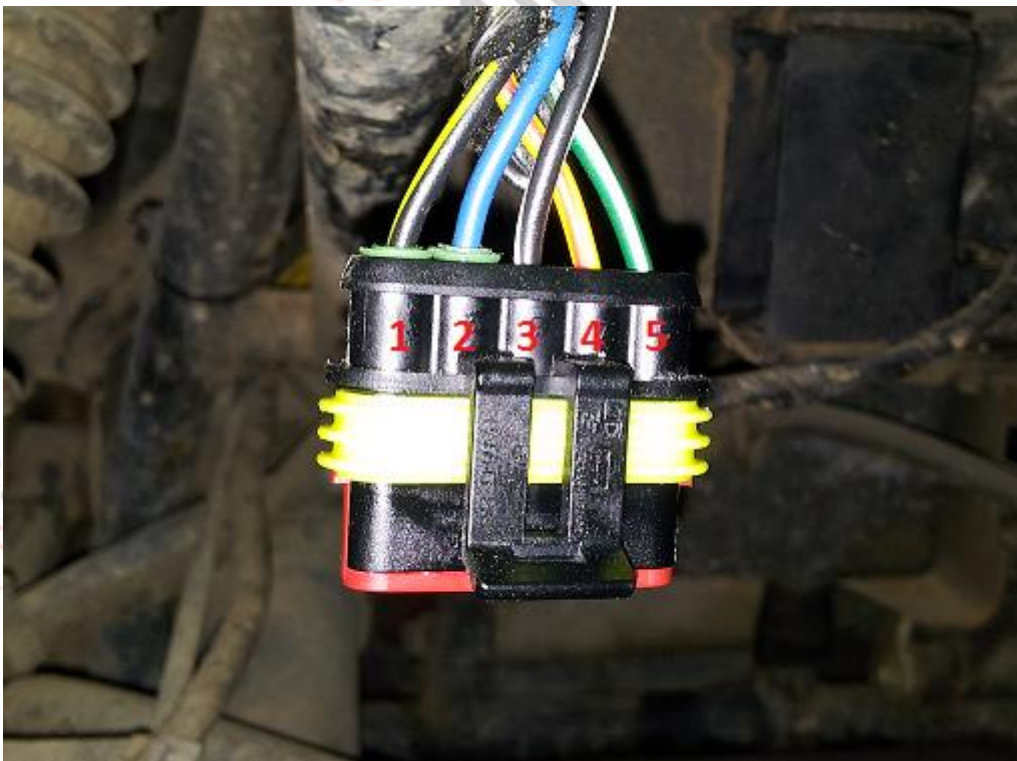

Connection Quad	Function	Connection Carmo TCI unit
1. Black/Yellow	Pick-up ground	1. Green
2. Blue	Pick-up	2. Yellow
3. Black/White	Ground	3. Green
4. Yellow/Red	12 Volt	4. Red
5. Green/White	Ignition coil	5. Orange

You can now mount the Carmo TCI unit and start the quad.

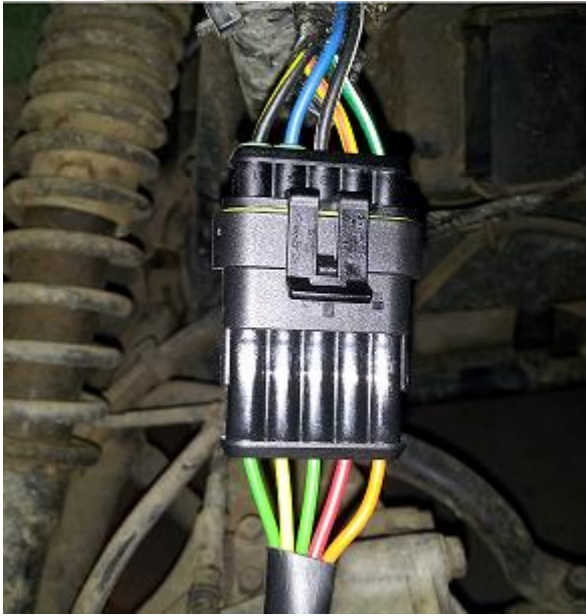

Have fun!

Items supplied:

- Carmo TCI unit
- Connector with 5 rings and fastons